


LOCATION OF SPARE PARTS IN THE UNIT

Model:
RCI-1.0FSN4
RCI-1.5FSN4
RCI-2.0FSN4
RCI-2.5FSN4
RCI-3.0FSN4
RCI-4.0FSN4
RCI-5.0FSN4
RCI-6.0FSN4

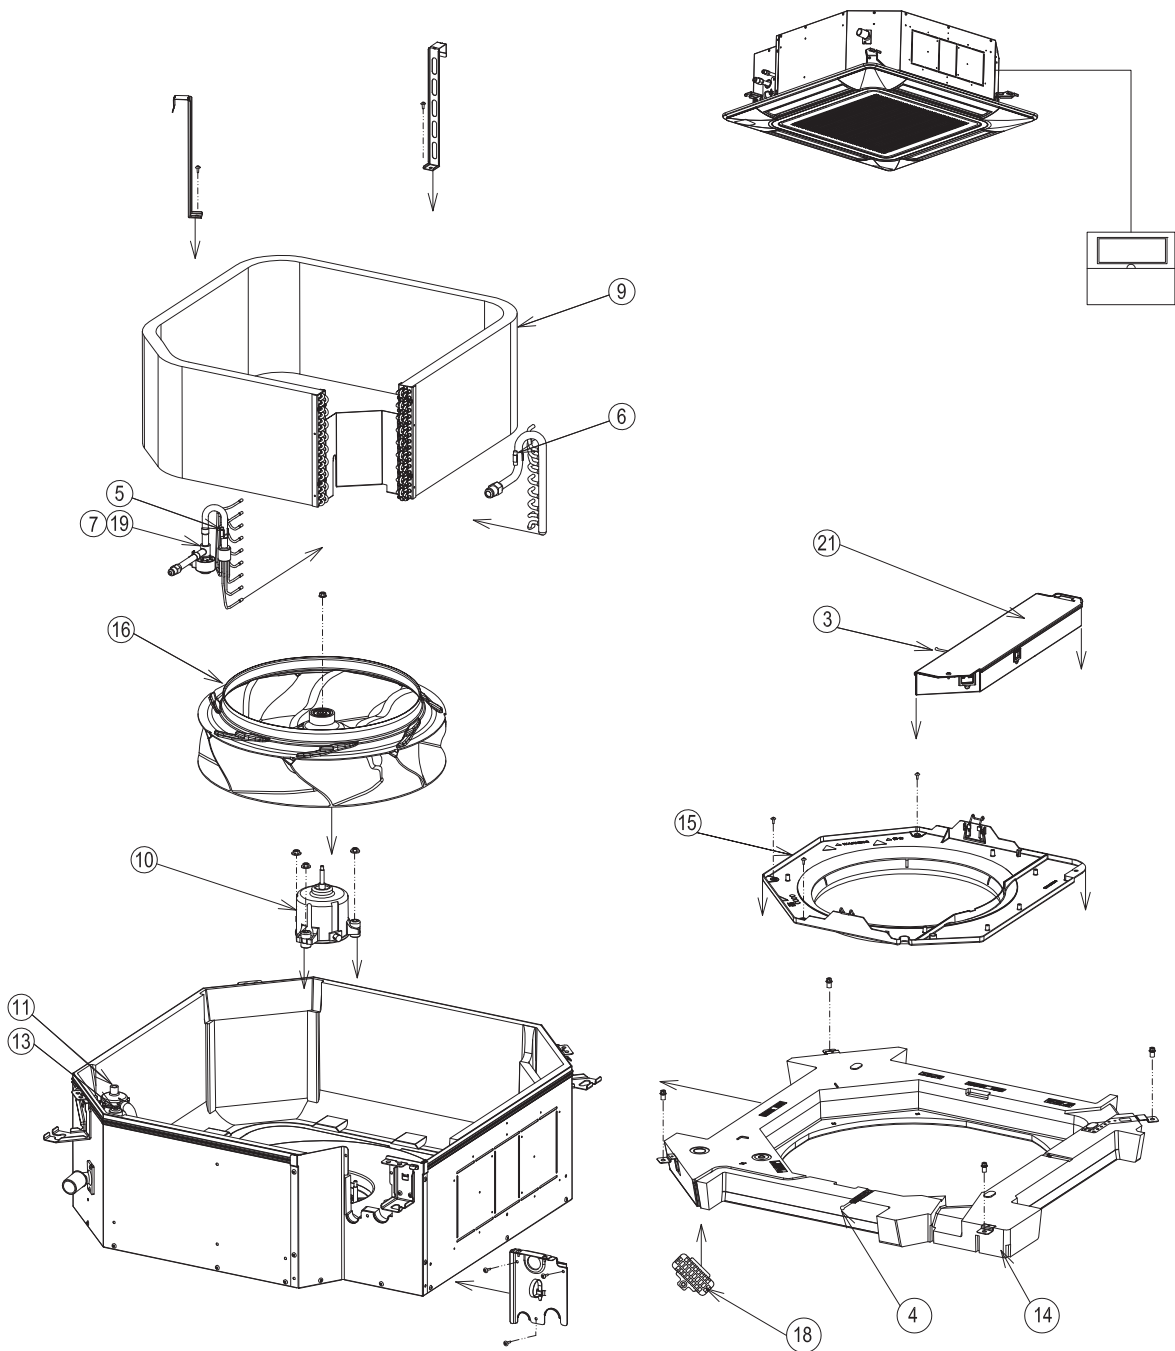

LOCATION OF SPARE PARTS IN ELECTRICAL BOX

- Model:
- RCI-1.0FSN4
 - RCI-1.5FSN4
 - RCI-2.0FSN4
 - RCI-2.5FSN4
 - RCI-3.0FSN4
 - RCI-4.0FSN4
 - RCI-5.0FSN4
 - RCI-6.0FSN4

