



NO.	HHAW PARTS NO.		Q'TY/ UNIT	PARTS NAME
1	HWRAC-50WXB	A01	1	BASE
2	HWRAC-50WEA	A02	1	COMPRESSOR
3	HWRAC-50WEA	A03	3	COMPRESSOR RUBBER
4	HWRAC-50NX2	A04	3	PUSH NUT
5	HWRAC-50WXB	A02	1	CONDENSER
6	HWRAC-50FXB	A01	1	REVERSING VALVE
7	HWRAC-50WEA	A05	1	SERVICE VALVE
8	HWRAC-50WEA	A06	1	SERVICE VALVE
9	HWRAC-50NX2	A09	1	ELECTRIC EXPANSION VALVE
10	HWRAC-50FXB	A02	1	SOUND PROOF
11	HWRAC-50FXB	A03	1	SOUND PROOF
12	HWRAC-50FXB	A04	1	SOUND PROOF
13	HWRAC-50FXB	A05	1	SOUND PROOF
14	HWRAC-50WEA	A11	1	O.L.R. COVER
15	HWRAC-50WXB	A04	1	CONNECTING CORD (COMPRESSOR)
16	HWRAC-50WXB	A28	1	THERMISTOR (DEFROST)
17	HWRAC-50NX2	A17	1	THERMISTOR SUPPORT
18	HWRAC-SX10HAK	A20	1	COIL (REVERSING VALVE)
19	HWRAC-E08H	A09	1	COIL (EXPANSION VALVE)
20	HWRAC-50WXB	A05	1	PARTITION
21	HWRAC-18WSPA	A06	1	REACTOR
22	HWRAC-50WXB	A06	1	FAN MOTOR SUPPORT
23	HWRAC-50NX2	A23	1	FAN MOTOR
24	HWRAC-50WXB	A07	1	PROPELLER FAN
25	HWRAC-25YH4	A24	1	NUT (PROPELLER FAN)
26	HWRAC-50WXB	A09	1	NET LEFT
27	HWRAC-50WXB	A10	1	LEFT PLATE
28	HWRAC-50FXB	A06	1	FRONT COVER
29	HWRAC-50WXB	A12	1	DISCHARGE GRILL
30	HWRAC-50FXB	A07	2	SOUND PROOF
31	HWRAC-50WXB	A14	1	THERMI-C
32	HWRAC-50WXB	A15	1	SIDE COVER (R)
33	HWRAC-50WXB	A16	1	TC-COVER
34	HWRAC-50WXB	A17	1	PROTECTIVE NET
35	HWRAC-50WXB	A18	1	TER-PLATE
36	HWRAC-50WXB	A19	1	TOP COVER
37	HWRAC-50WXB	A20	1	TERMINAL-COVERAS
38	HWRAC-50WXB	A21	1	EV-COVER
39	HWRAC-50WXB	A22	2	HANDLE
40	HWRAC-50WXB	A23	1	DRAIN PIPE
41	HWRAC-50WXB	A24	1	ELECTRIC PARTS PLATE
42	HWRAC-50WEB	A06	1	ELECTRIC PARTS COVER
43	HWRAC-50WEB	A07	2	SUPPORT (P.W.B.)
44	HWRAC-50WEB	A08	1	HEAT SINK
45	HWRAC-50FXB	A08	1	P.W.B. (MAIN)
46	HWRAC-50WEB	A10	1	12 CORD ASSEMBLY
47	HWRAC-50WEB	A11	1	CORD ASSEMBLY
48	HWRAC-18WEB	A18	1	TERMINAL BOARD (5P)
49	HWRAC-50NX2	A51	1	FUSE (25A)
50	HWRAC-50NX2	A52	2	FUSE (3.15A)
51	HWRAC-50WEB	A13	1	SUPPORT (P.W.B.)
52	HWRAC-50WEB	A14	1	O.L.R. COVER
53	HWRAC-50WXB	A26	1	FIX-PLATE
54	HWRAC-50WXB	A27	4	PC-SUP
55	HWRAC-50FXB	A09	1	VALVE-ZA
56	HWRAC-50FXB	A10	1	S-PIPEAS