



NO	JCH-WH PARTS NO	Q' TY/UNIT	PARTS NAME
1	HWRAC-50WPC A01	1	BASE
2	HWRAC-50WED A01	1	COMPRESSOR
3	HWRAC-50NX2 A04	3	PUSH NUT
4	HWRAC-50WEC A01	1	CONDENSER
5	HWRAC-42WPD A01	1	REVERSING VALVE
6	HWRAC-50WEA A05	1	SERVICE VALVE
7	HWRAC-50WEA A06	1	SERVICE VALVE
8	HWRAC-50WED A03	1	ELECTRIC EXPANSION VALVE
9	HWRAC-50WED A04	1	SOUND PROOF
10	HWRAC-50WPC A04	1	SOUND PROOF
11	HWRAC-50WEC A07	2	SOUND PROOF
12	HWRAC-42WPD A02	1	SOUND PROOF
13	HWRAC-25WXD A08	1	O. L. R COVER
14	HWRAC-50WEA A12	1	CONNECTING CORD (COMP)
15	HWRAC-50NX2 A16	1	THERMISTOR (DEFROST)
16	HWRAC-50NX2 A17	1	THERMISTOR SUPPORT
17	HWRAC-25WXD A09	1	COIL (REVERSING VALVE)
18	HWRAC-50WED A07	1	COIL (EXPANSION VALVE)
19	HWRAC-50WED A08	1	PARTITION
20	HWRAC-50WED A09	1	REACTOR
21	HWRAC-50WEB A02	1	FAN MOTOR SUPPORT
22	HWRAC-42WPD A03	1	FAN MOTOR
23	HWRAC-50WEC A12	1	PROPELLER FAN
24	HWRAC-50NX2 A25	1	NUT (PROPELLER FAN)
25	HWRAC-50NX2 A26	1	SIDE COVER (L)
26	HWRAC-50NX2 A27	1	HANDLE
27	HWRAC-50WED A11	1	FRONT COVER
28	HWRAC-50WEC A14	1	DISCHARGE GRILL
29	HWRAC-50WEA A14	1	EARTH-PLATE
30	HWRAC-E14H3 914	1	THERMISTOR (OUTDOOR TEMPERATURE)
31	HWRAC-50WED A12	1	SIDE COVER (R)
32	HWRAC-18WSPA A24	1	TC-COVER
33	HWRAC-50WEC A15	1	H-SHEET
34	HWRAC-50WEC A16	1	TERMINAL COVER
35	HWRAC-SX18HAK A28	1	TOP COVER
36	HWRAC-50WED A13	1	SERVICE VALVE COVER
37	HWRAC-50NX2 A36	1	BUSH ASSEMBLY
38	HWRAC-50NX2 A37	2	BUSH
39	HWRAC-50NX2 A38	1	DRAIN PIPE
40	HWRAC-50WEC A17	1	ELECTRIC PARTS PLATE
41	HWRAC-50WED A14	1	ELECTRIC PARTS COVER
42	HWRAC-50WEB A07	2	SUPPORT2 (P. W. B.)
43	RAC-1F50KVY014	1	HEAT SINK
44	HWRAC-42WPD A04	1	P. W. B. (MAIN)
	HWRAC-50WPD A01	1	P. W. B. (MAIN)
45	HWRAC-50WEB A11	2	CORD (REACTOR)
46	HWRAC-50WED A16	1	TERMINAL BOARD (5P)
47	HWRAC-50WED A17	1	FUSE (25A)
48	HWRAC-25WXD A11	2	FUSE (3. 15A)
49	HWRAC-50WEB A13	1	SUPPORT1 (P. W. B.)
50	HWRAC-25WXD A04	1	SOUND PROOF